

內徑車刀
BORING BARS


外徑車刀
TOOL HOLDERS

牙刀 & 開槽刀
THREADING & GROOVING



銑刀
MILLING

孔加工
BORING TOOLS COMPONENTS



配件
SPARE PARTS

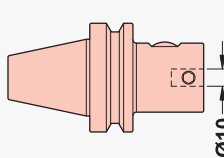

Ø10

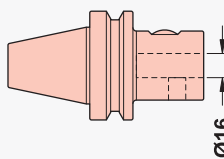
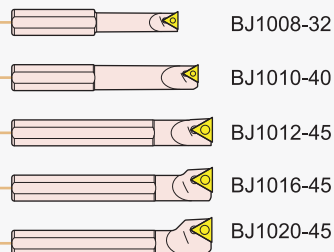


Ø16

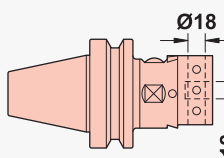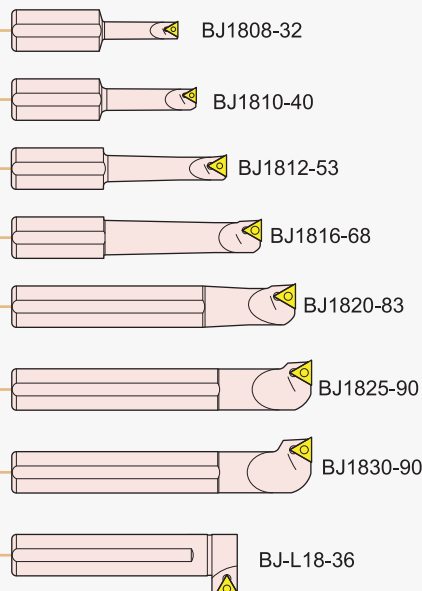




Ø18

Ø18

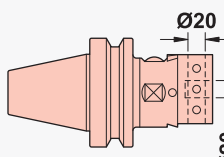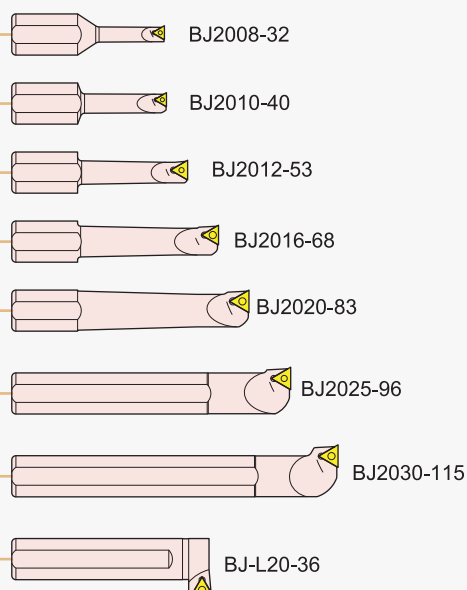

Ø20

Ø20

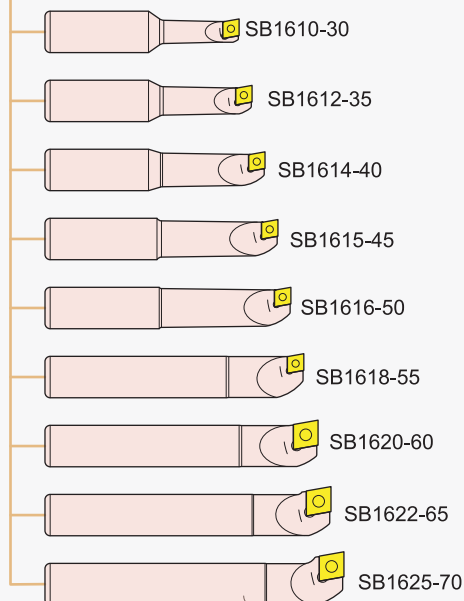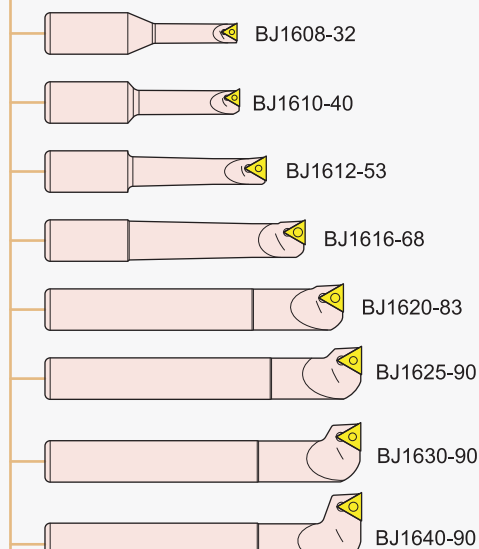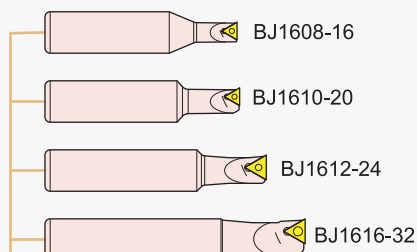

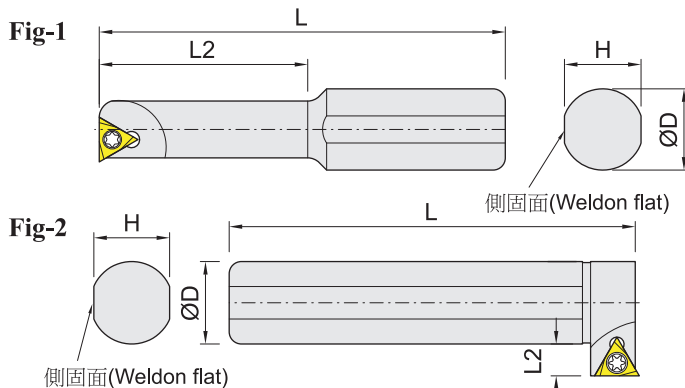
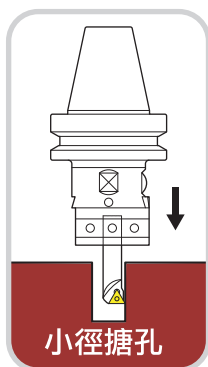


FIG-1 Item code	L2	FIG-1 Item code	L2	FIG-2 Item code	L2	Dimensions,mm				Insert	Screw	Wrench	Weight (kg)
						D	Range	L	H				
BJ1806-12	12	BJ1806-24	24			18	6-8	68	17	WB..0601..	MS2003A	ETF06	0.14
		BJ1808-32	32			18	8-10	72	17	TB..0601..	MS2004A		0.14
		BJ1810-40	40			18	10-12	80	17		MS2005A		0.16
		BJ1812-53	53			18	12-16	93	17	TP..0902..	MS2506A	ETF09	0.19
		BJ1816-68	68			18	16-20	108	17				0.22
		BJ1820-83	40			18	20-25	123	17	TP..1103..	MS3008A	ETF09	0.25
		BJ1825-90	40			18	25-30	130	17				0.26
		BJ1830-90	40			18	30-35	130	17				0.26
				BJ-L18-36	9	18	--	97	17				0.19
※ BJ18-8PCS		BJ1808-32, BJ1810-40, BJ1812-53, BJ1816-68, BJ1820-83, BJ1825-90, BJ1830-90, BJ-L18-36											1.99

※ 表盒裝 SUITE

FIG-1 Item code	L2	FIG-1 Item code	L2	FIG-2 Item code	L2	Dimensions,mm				Insert	Screw	Wrench	Weight (kg)
						D	Range	L	H				
BJ2006-12	12	BJ2006-24	24			20	6-8	68	18	WB..0601..	MS2003A	ETF06	0.11
BJ2008-16	16	BJ2008-32	32			20	8-10	74	18	TB..0601..	MS2004A		0.12
BJ2010-20	20	BJ2010-40	40			20	10-12	75	18		MS2005A		0.12
		BJ2012-53	53			20	12-16	85	18	TP..0902..	MS2506A	ETF09	0.13
		BJ2016-68	68			20	16-20	100	18				0.17
		BJ2020-83	83			20	20-25	115	18	TP..1103..	MS3008A		0.24
		BJ2025-96	40			20	25-30	135	18				0.33
		BJ2030-115	40			20	30-35	158	18				0.39
				BJ-L20-36	8	20	--	97	18				0.24
※ BJ20-8PCS		BJ2008-32, BJ2010-40, BJ2012-53, BJ2016-68, BJ2020-83, BJ2025-96, BJ2030-115, BJ-L20-36											2.26

※ 表盒裝 SUITE

內徑車刀
BORING BARS

外徑車刀
TOOL HOLDERS

牙刀 & 開槽刀
THREADING & GROOVING

銑刀
MILLING

孔加工
BORING TOOLS COMPONENTS

配件
SPARE PARTS