

內徑車刀
BORING BARS


外徑車刀
TOOL HOLDERS

牙刀 & 開槽刀
THREADING & GROOVING



銑刀
MILLING

孔加工
BORING TOOLS COMPONENTS



配件
SPARE PARTS

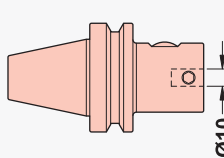

Ø10

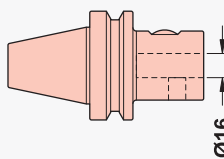
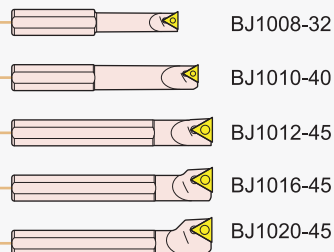


Ø16

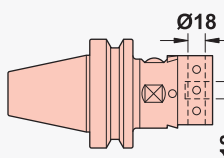


Ø18

Ø18

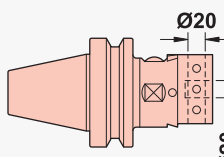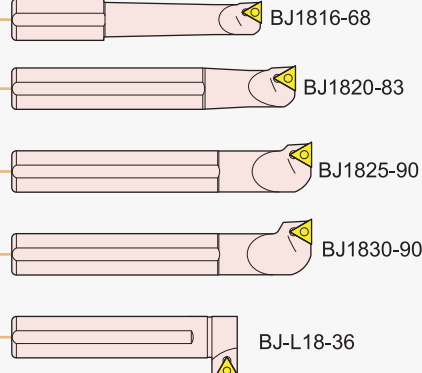

Ø20

Ø20

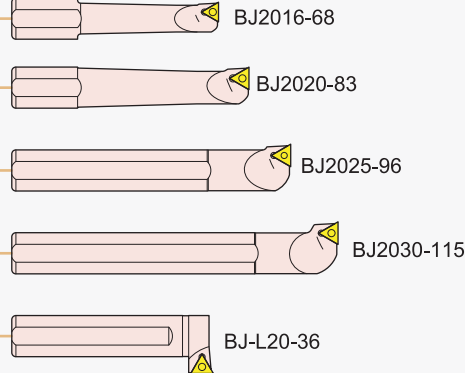




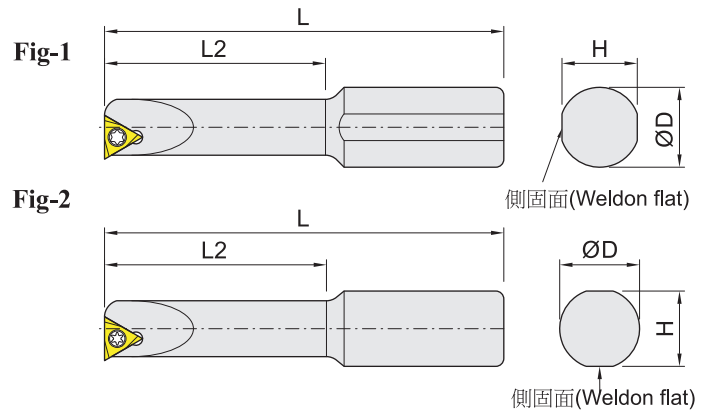


FIG-1 Item code	L2	FIG-2 Item code	L2	FIG-2 Item code	L2	Dimensions,mm				Insert	Screw	Wrench	Weight (kg)
						D	Range	L	H				
		BJ10B06-12	12	BJ10B06-24	24	10	6-8	64	9	WB..0601..	MS2003A	ETF06	0.04
BJ1008-32	32			BJ10B08-32	32		8-10	64		TB..0601..	MS2004A		0.04
BJ1010-40	40			BJ10B10-40	40		10-12	72			MS2005A		0.04
BJ1012-45	22			BJ10B12-45	22		12-16	77		TP..0902..	MS2506A	ETF09	0.05
BJ1016-45	22			BJ10B16-45	22		16-20	77					0.05
				BJ10B20-45	25		20-25	77					0.05
BJ1020-45	27						20-25	77		TP..1103..	MS3008A		0.05
※ BJ10-5PCS		BJ1008-32, BJ1010-40, BJ1012-45, BJ1016-45, BJ1020-45											0.66
※ BJ10B-6PCS		BJ10B06-24, BJ10B08-32, BJ10B10-40, BJ10B12-45, BJ10B16-45, BJ10B20-45											0.64

※ 表盒裝 SUITE

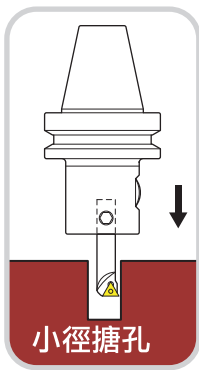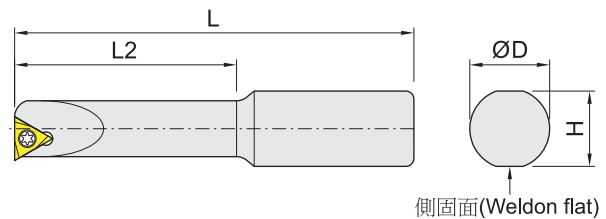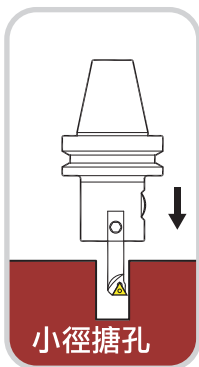

Item code	L2	Item code	L2	Dimensions,mm				Insert	Screw 	Wrench 	Weight (kg)
				D	Range	L	H				
BJ12B06-12	12	BJ12B06-24	24	12	6-8	64	11	WB..0601..	MS2003A	ETF06	0.04
		BJ12B08-32	32		8-10	64		TB..0601..	MS2004A		0.04
		BJ12B10-40	40		10-12	72			MS2005A		0.04
		BJ12B12-45	45		12-16	77	TP..0902..	MS2506A	ETF09	0.05	
		BJ12B16-45	22		16-20	77				0.05	
		BJ12B20-45	25		20-25	77				0.05	
		BJ12B25-45	25		25-30	77				0.06	
※BJ12B-7PCS		BJ12B06-24,BJ12B08-32, BJ12B10-40, BJ12B12-45, BJ12B16-45, BJ12B20-45, BJ12B25-45									0.77

※ 表盒裝 SUITE

內徑車刀
BORING BARS

外徑車刀
TOOL HOLDERS

牙刀 & 開槽刀
THREADING & GROOVING

銑刀
MILLING

孔加工
BORING TOOLS COMPONENTS

配件
SPARE PARTS