

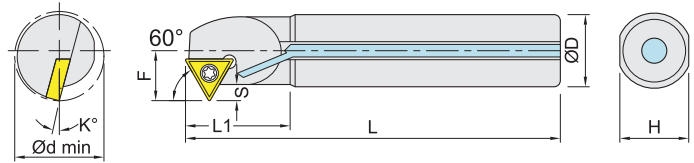


STWB/C/P

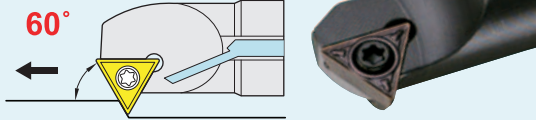



Coolant steel shank (Right-hand shown)
中心出水鋼柄 右向示意圖

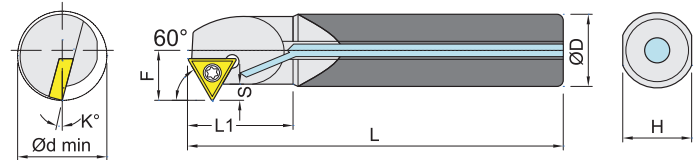

Coolant carbide shank (Right-hand shown)
中心出水鎢鋼柄 右向示意圖

Steel shank Item code		Dimensions,mm								Insert	Spare parts	Weight Kg
無水孔Non-coolant	水孔Coolant	D	L	L1	F	S	H	K°	dmin			
S0806K-STWBR/L-06-L15	A0806K-STWBR-06-L15	8	125	15	4.5	1.5	7	15	9	TB..0601..	①	0.07
S08K-STWCR/L-09	A08K-STWCR/L-09	8	125	23	6	2	7	15	11	TC..0902..	②	0.07
S10K-STWCR/L-11	A10K-STWCR/L-11	10	125	23	7.5	2.5	9	15	13	TC..1102..	③	0.09
S12M-STWCR/L-11	A12M-STWCR/L-11	12	150	30	8.5	2.5	11	13	16			0.13
S14M-STWCR/L-11		14	150	30	9.5	2.5	13	11	18			0.18
S16Q-STWCR/L-11	A16Q-STWCR/L-11	16	180	35	10.5	2.5	15	10	20			0.28
S20R-STWCR/L-11	A20R-STWCR/L-11	20	200	40	12.5	2.5	18	7	25			0.49
S20R-STWCR/L-16	A20R-STWCR/L-16	20	200	40	14.5	4.5	18	8	26			TC..16T3..
S25R-STWCR/L-16	A25R-STWCR/L-16	25	200	45	17	4.5	23	6	30			0.77
S32S-STWCR/L-16	A32S-STWCR/L-16	32	250	50	20.5	4.5	30	4	40			1.58
S08K-STWPR/L-08	A08K-STWPR/L-08	8	125	20	6	2	7	15	11	TP..0802..	⑤	0.07
S08K-STWPR/L-09	A08K-STWPR/L-09	8	125	23	6	2	7	15	11	TP..0902..	⑥	0.07
S10K-STWPR/L-09	A10K-STWPR/L-09	10	125	23	7.5	2.5	9	15	13			0.09
S10K-STWPR/L-11	A10K-STWPR/L-11	10	125	23	7.5	2.5	9	15	13	TP..1103..	⑦	0.09
S12M-STWPR/L-11	A12M-STWPR/L-11	12	150	30	8.5	2.5	11	13	16			0.13
S14M-STWPR/L-11		14	150	30	9.5	2.5	13	11	18			0.18
S16Q-STWPR/L-11	A16Q-STWPR/L-11	16	180	35	10.5	2.5	15	10	20			0.28
S20R-STWPR/L-11	A20R-STWPR/L-11	20	200	40	12.5	2.5	18	7	25			0.49
S20R-STWPR/L-1603	A20R-STWPR/L-1603	20	200	40	14.5	4.5	18	8	26	TP..1603..	⑧	0.49

Carbide shank Item code		Dimensions,mm								Insert	Spare parts	Weight Kg
無水孔Non-coolant	水孔Coolant	D	L	L1	F	S	H	K°	dmin			
C12M-STWCR-11		12	150	30	8.5	2.5	11.2	13	16	TC..1102..	③	0.24
C12Q-STWCR-11	E12Q-STWCR-11	12	180	30	8.5	2.5	11.2	13	16			0.29
C16R-STWCR-11		16	200	35	10.5	2.5	15.2	10	20			0.58
C08K-STWPR-09		8	125	23	6	2	7.2	15	11	TP..0902..	⑥	0.09
C12M-STWPR-11		12	150	30	8.5	2.5	11.2	13	16	TP..1103..	⑦	0.24

Insert	Spare parts	Screw 	Wrench 
TB..0601..	①	MS2004A	ETF06
TC..0902..	②	MS2205A	ETF07
TC..1102..	③	MS2506A	ETF09
TC..16T3..	④	MS4011A	ETF15
TP..0802..	⑤	MS2205A	ETF07
TP..0902..	⑥	MS2506A	ETF09
TP..1103..	⑦	MS3008A	ETF09
TP..1603..	⑧	MS4011A	ETF15

內徑車刀
BORING BARS

外徑車刀
TOOLHOLDERS

牙刀 & 開槽刀
THREADING & GROOVING

銑刀
MILLING

孔加工
BORING TOOLS COMPONENTS

配件
SPARE PARTS